


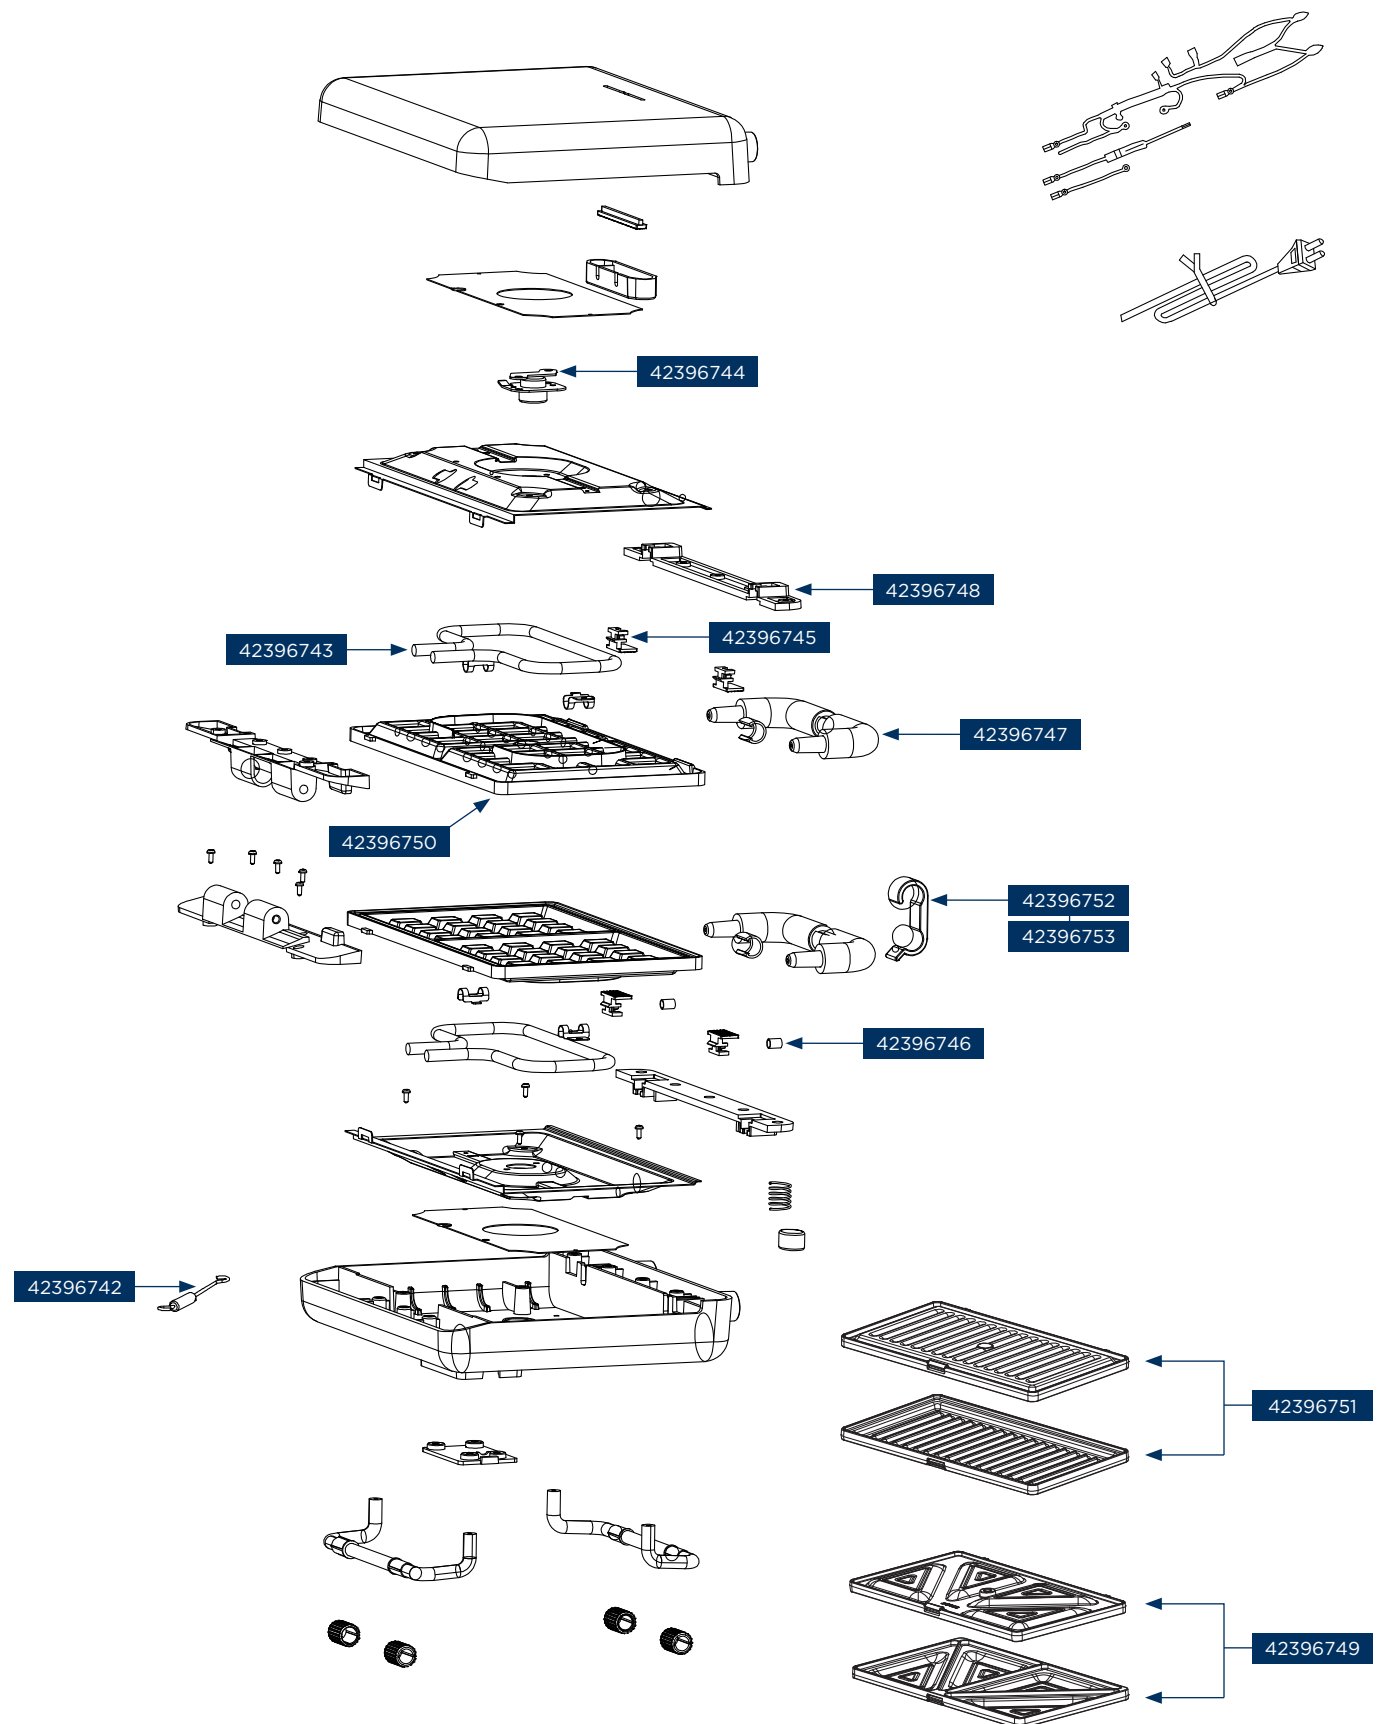

Concept kód	Český název	Anglický název
42396742	Tepelná pojistka SV3090, SV3091	Thermal fuse SV3090, SV3091
42396743	Topné těleso SV3090, SV3091	Heating element SV3090, SV3091
42396744	Termostat SV3090, SV3091	Thermostat SV3090, SV3091
42396745	Tlačítko aretace desek SV3090, SV3091	Plate locking button SV3090, SV3091
42396746	Pružina SV3090, SV3091	Push button SV3090, SV3091
42396747	Madlo SV3090, SV3091	Handle SV3090, SV3091
42396748	Kryt aretace desek SV3090, SV3091	Plate locking cover SV3090, SV3091
42396749	Deska sendvičová SV3090, SV3091	Sandwich plate SV3090, SV3091
42396750	Deska vaflová SV3090, SV3091	Waffle plate SV3090, SV3091
42396751	Deska grilovací SV3090, SV3091	Grill plate SV3090, SV3091
42396752	Uzávěr SV3090	Locker SV3090
42396753	Uzávěr SV3091	Locker SV3091